

**PORSCHE DIESEL**

**PORSCHE DIESEL**

 Code



 Code



 Code




 Code




**F**


F 217 .....	298
F 219 .....	298
F 319 .....	298
F 329 .....	298
F 419 .....	298

 Code




 Code



 Code



 Code



PORSCHЕ DIESEL							
Standard Star Standard T	2 Zyl.	18-22 kW (24-30 PS)	F 217 F 219		<b>03-12712-02</b> <sup>(18)</sup>		
Super Export Super L	3 Zyl.	29 kW (39 PS)	F 319 F 329		<b>03-12712-02</b> <sup>(18)</sup>		
Master 419	4 Zyl.	37 kW (50 PS)	F 419	01/60→	<b>03-12712-02</b> <sup>(18)</sup>		

<b>71-12712-00</b> 2x 		<b>71-16261-10</b> 2x 	<b>71-16256-30</b> 2x 		
<b>71-12712-00</b> 3x 		<b>71-16261-10</b> 3x 	<b>71-16256-30</b> 3x 		
<b>71-12712-00</b> 4x 		<b>71-16261-10</b> 4x 	<b>71-16256-30</b> 4x 		

<sup>(18)</sup> für einen Zylinderkopf / for one cylinder head / pour une culasse / para una culata de cilindro / per una testata / для головки блока цилиндров

